




100MM HEIGHT SETTER INSTRUCTION MANUAL

To ensure the proper use of the product, please read this instruction manual thoroughly.

HEIGHT SETTER COMPONENTS

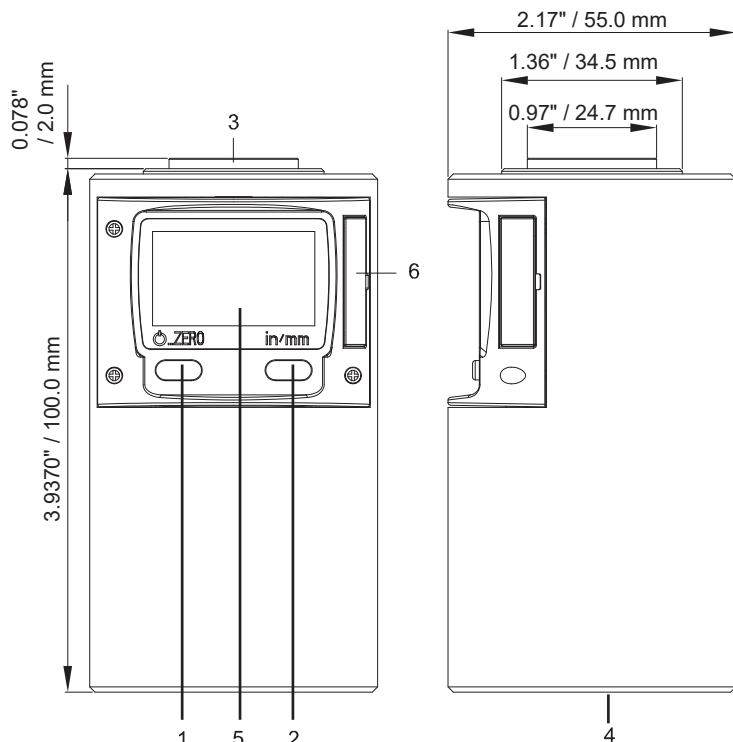

1. ϕ / ZERO button: Press and hold to set zero. Press and quickly release to power on/off. Note: Unit will turn on when measuring face is actuated.
2. in / mm button: Press and quickly release to change the displayed unit of measurement.
3. Contact surface
4. Magnets
5. LED Display: Lights up when contact surface is within $\pm 0.0002'' / \pm 0.005\text{mm}$
6. Battery

FEATURES

1. Inductive measurement system: Used to measure the displacement of height
2. Auto power-off when idle for 5 minutes
3. Powers on automatically when contact surface is actuated

NOTE: The height setter will reset to factory settings after 8 hours, requiring the zero point to be reconfigured.

100MM HEIGHT SETTER




PRODUCT CHARACTERISTICS

Resolution	0.00005" / 0.001mm
Accuracy	$\pm 0.0004'' / \pm 0.01\text{mm}$
Repeatability	0.0001" / 0.003 mm
Protection Grade	IP65
Range (100mm)	0 – 0.147" / 0 – 3.7 mm
Battery	CR2032
Response Speed	1.6 m/s

INSTRUCTIONS

1. Set zero by placing the contact surface against a flat surface, or the included gauge pin if supplied.

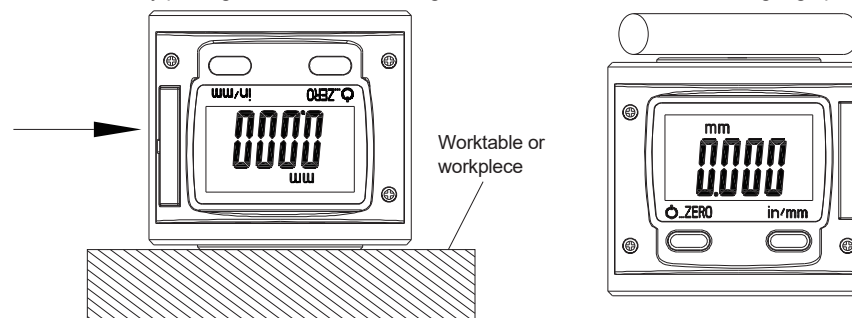

2. Place the bottom end on a ferrous surface to fix the height setter in place. Slowly descend the cutting tool onto the contact surface until the LED display lights up and reaches zero.

