

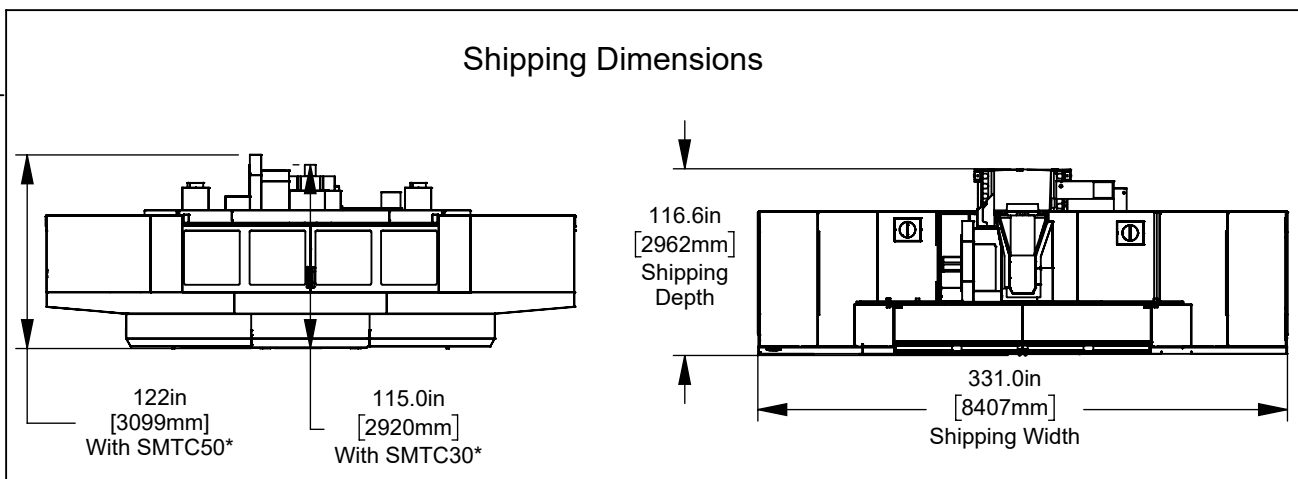


*Add 8.0in [203.2mm] for EC8 raised column option

Shipping Dimensions

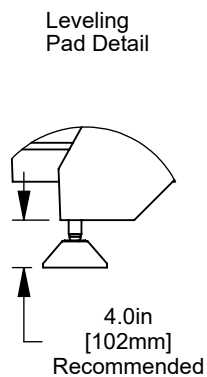

Air & Power

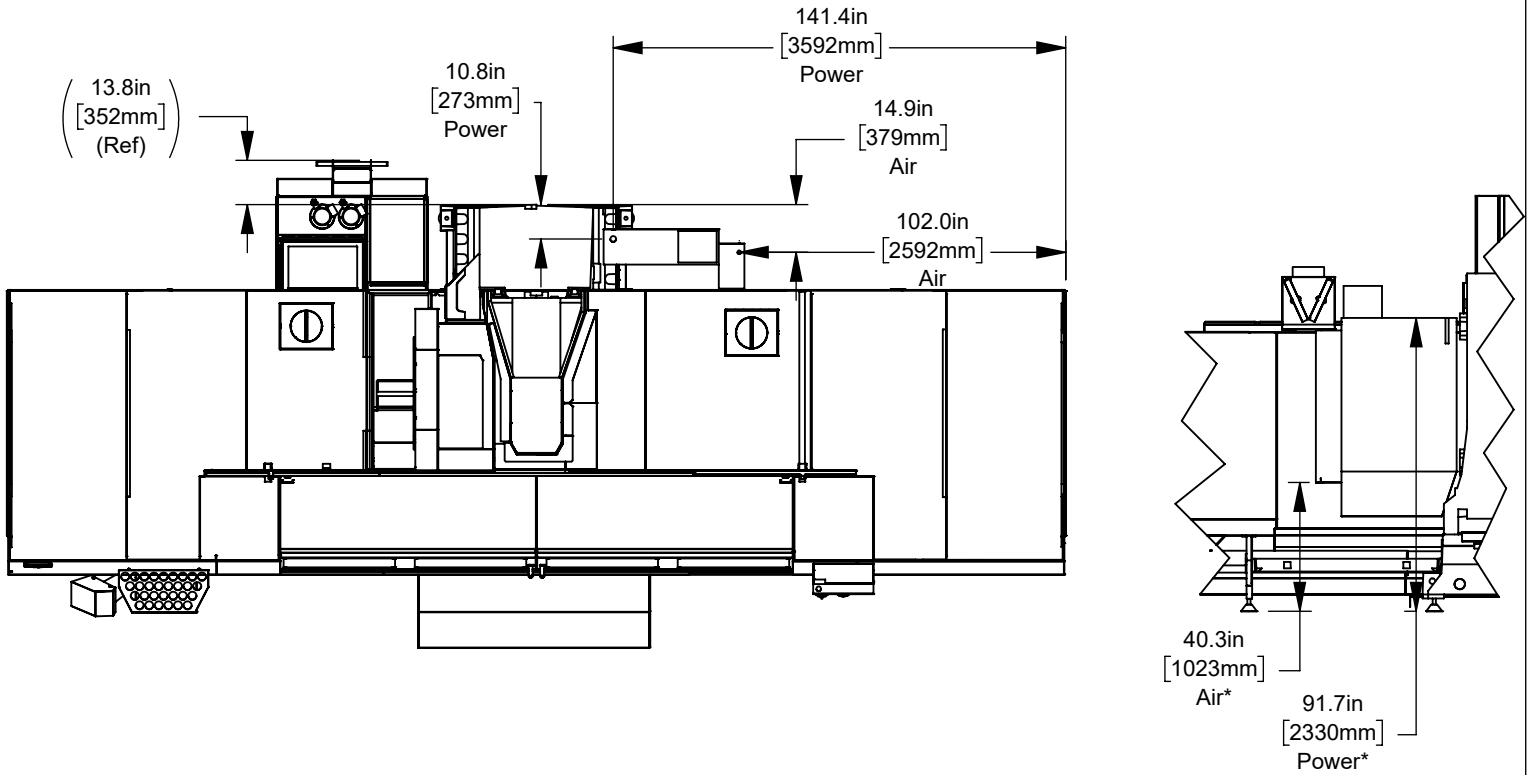


*Add 8.0in [203.2mm] for EC8 raised column option

Anchor Detail

Ø .625in [16mm]
▽ 3.5in [89mm]


Anchor Pattern

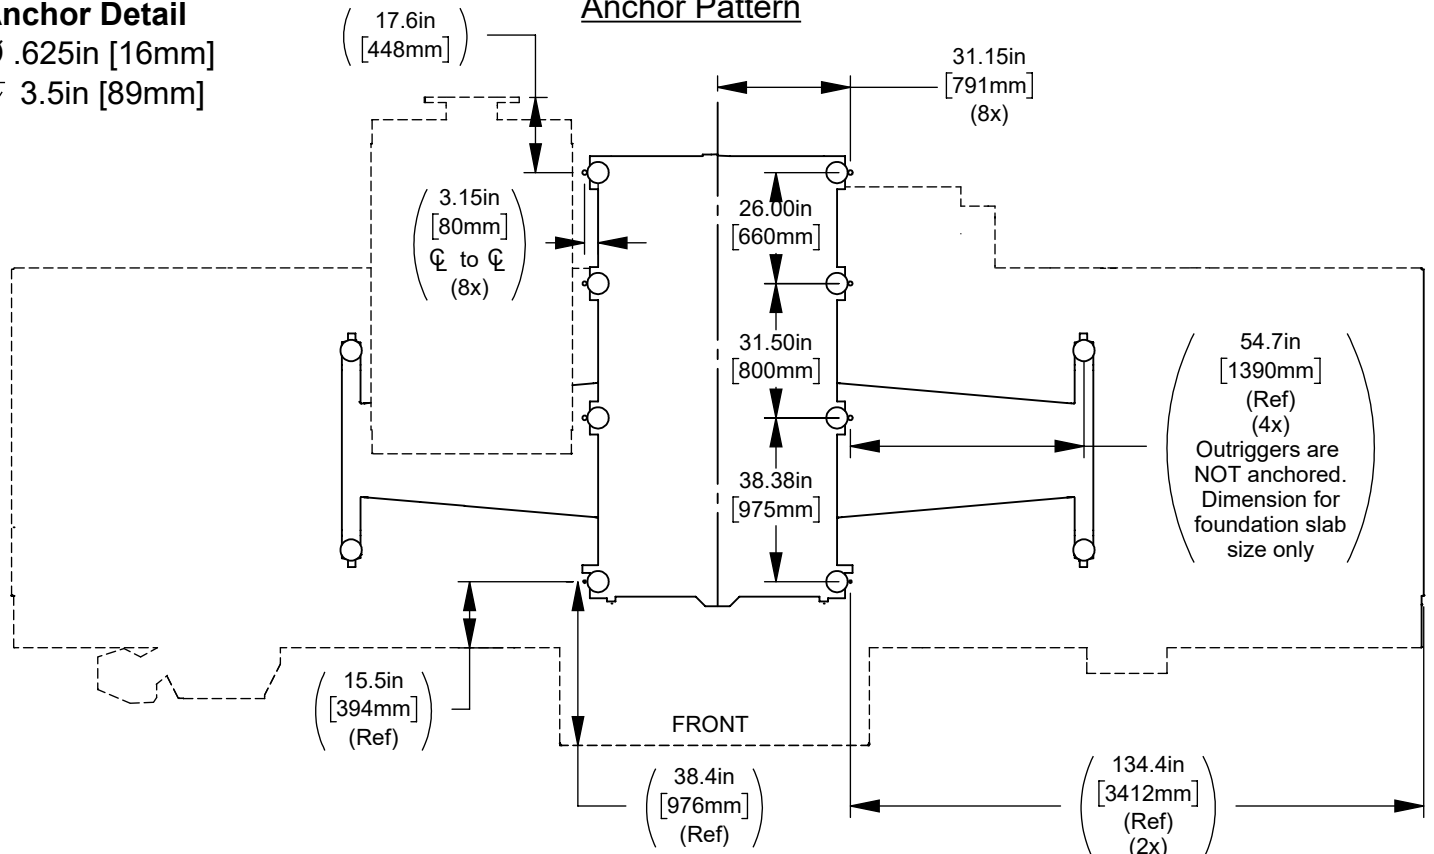

Note - Machine must be placed on one continuous slab.
Slab to extend 12" [305mm] beyond all leveling feet


Anchor Patter for Cast/Hammer-In anchors with 3.15" [80mm] Leveling pad center to anchor bore hole center distance

Height Breakdown

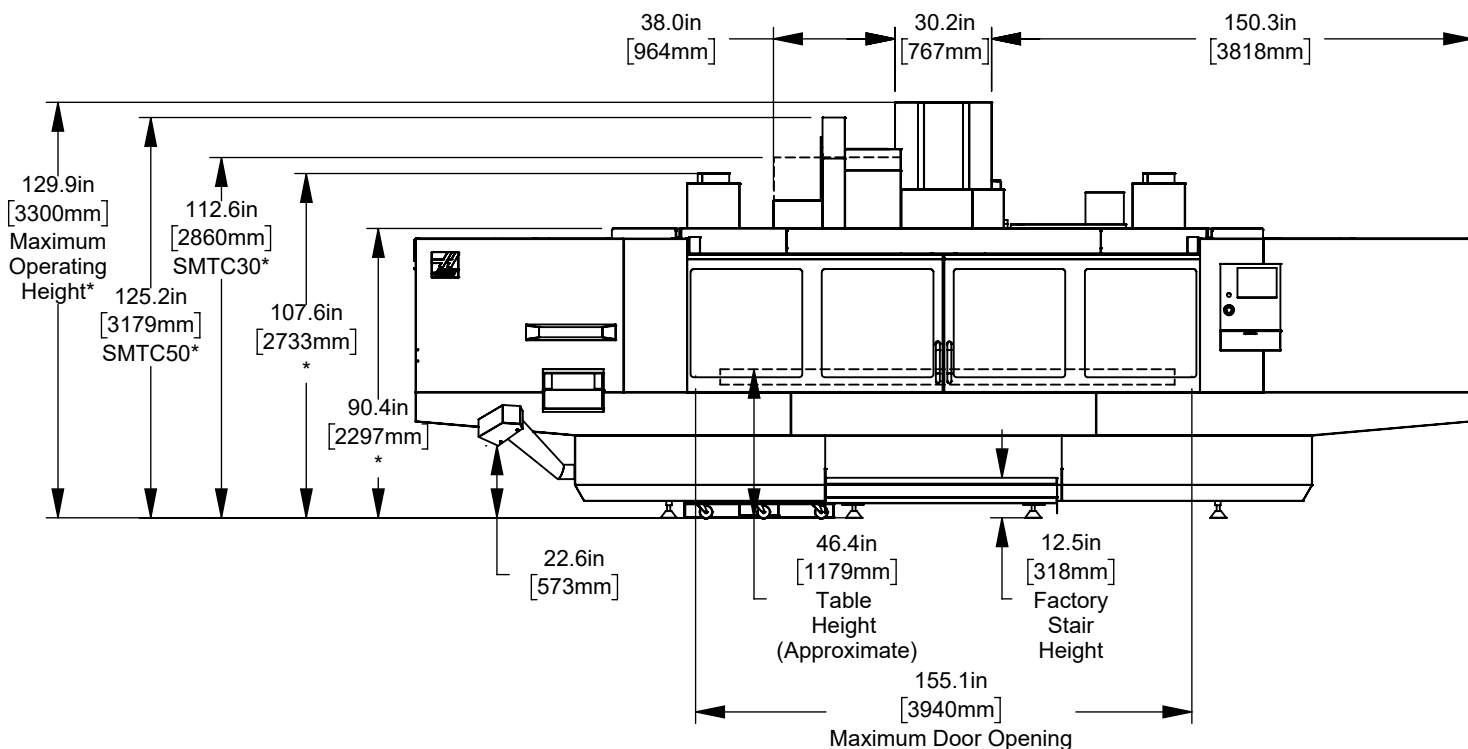


*Add 8.0in [203.2mm] for EC8 raised column option

Width Breakdown

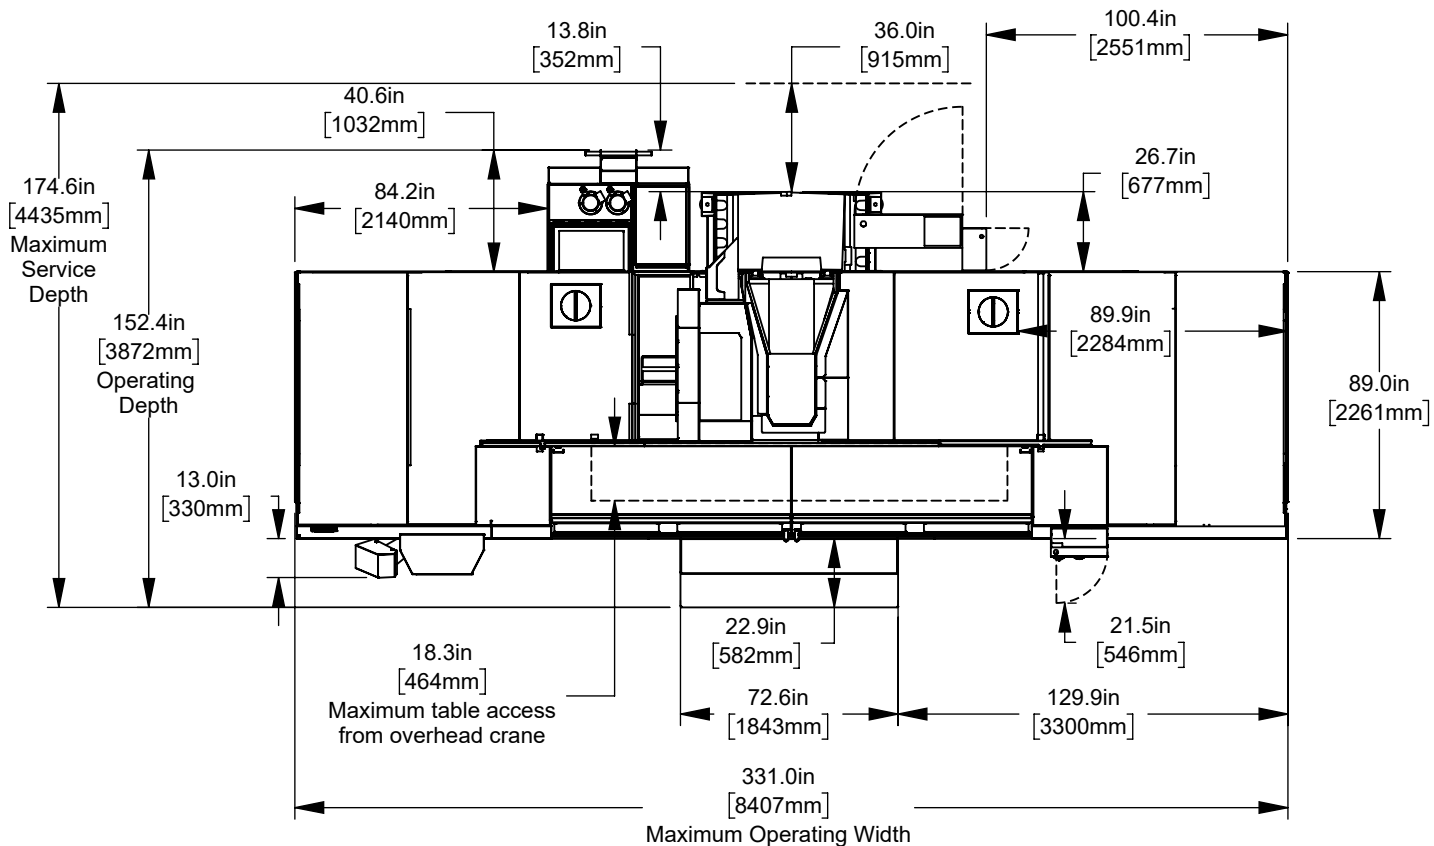


Maintain 3 feet [915mm] clearance to the nearest obstruction around all sides of machine perimeter for maintenance access

X & Y-Axis Travel

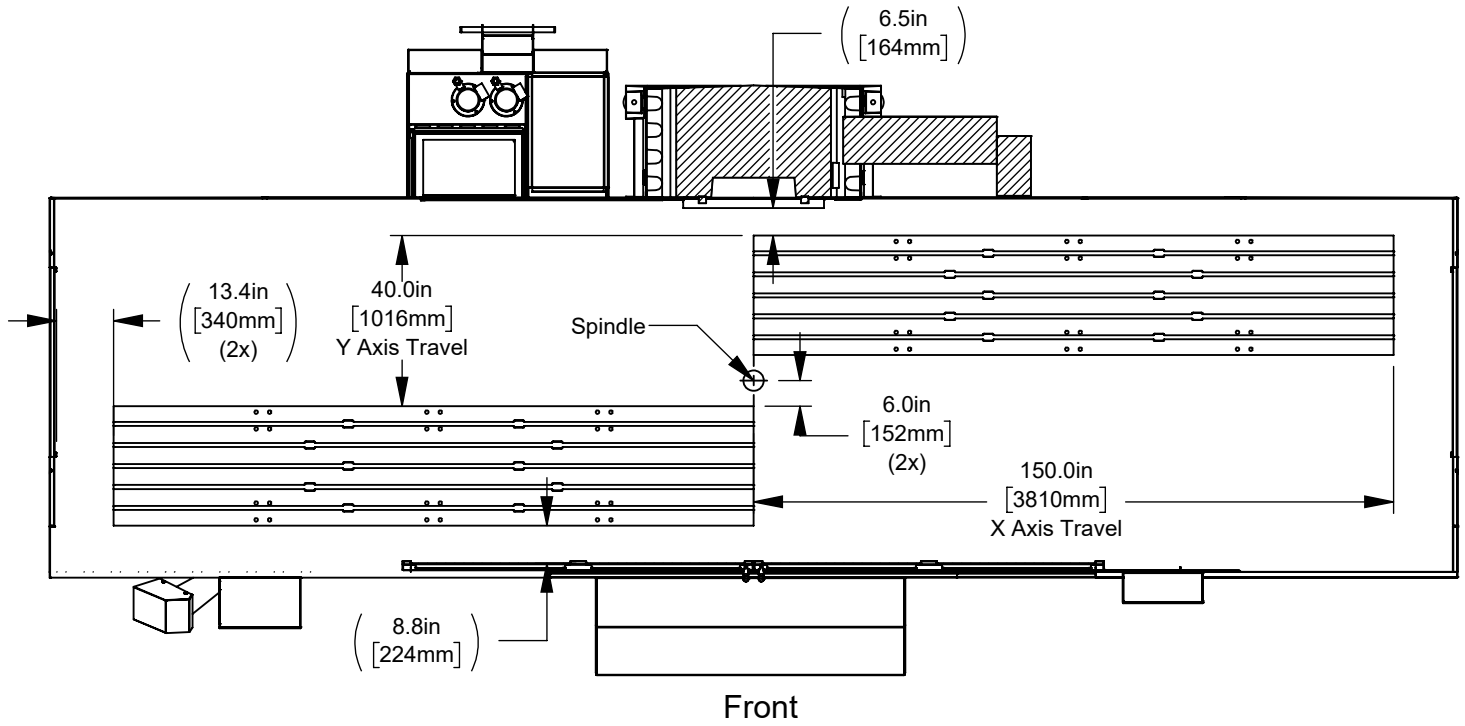


Z-Axis Travel

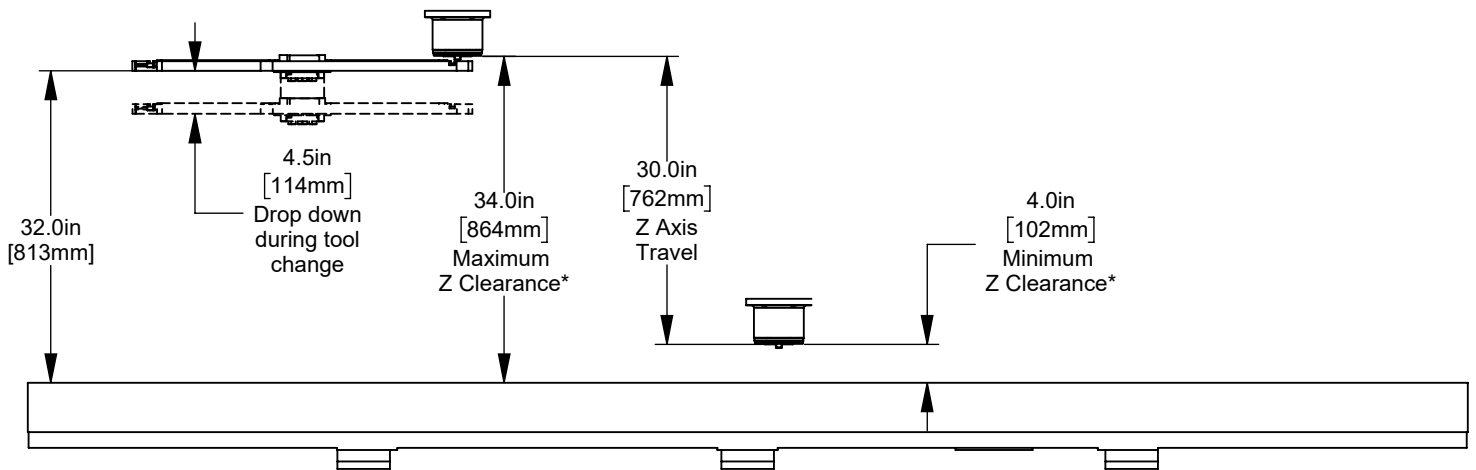

*Add 8.0in [203.2mm] clearance for EC8 raised column option

Table

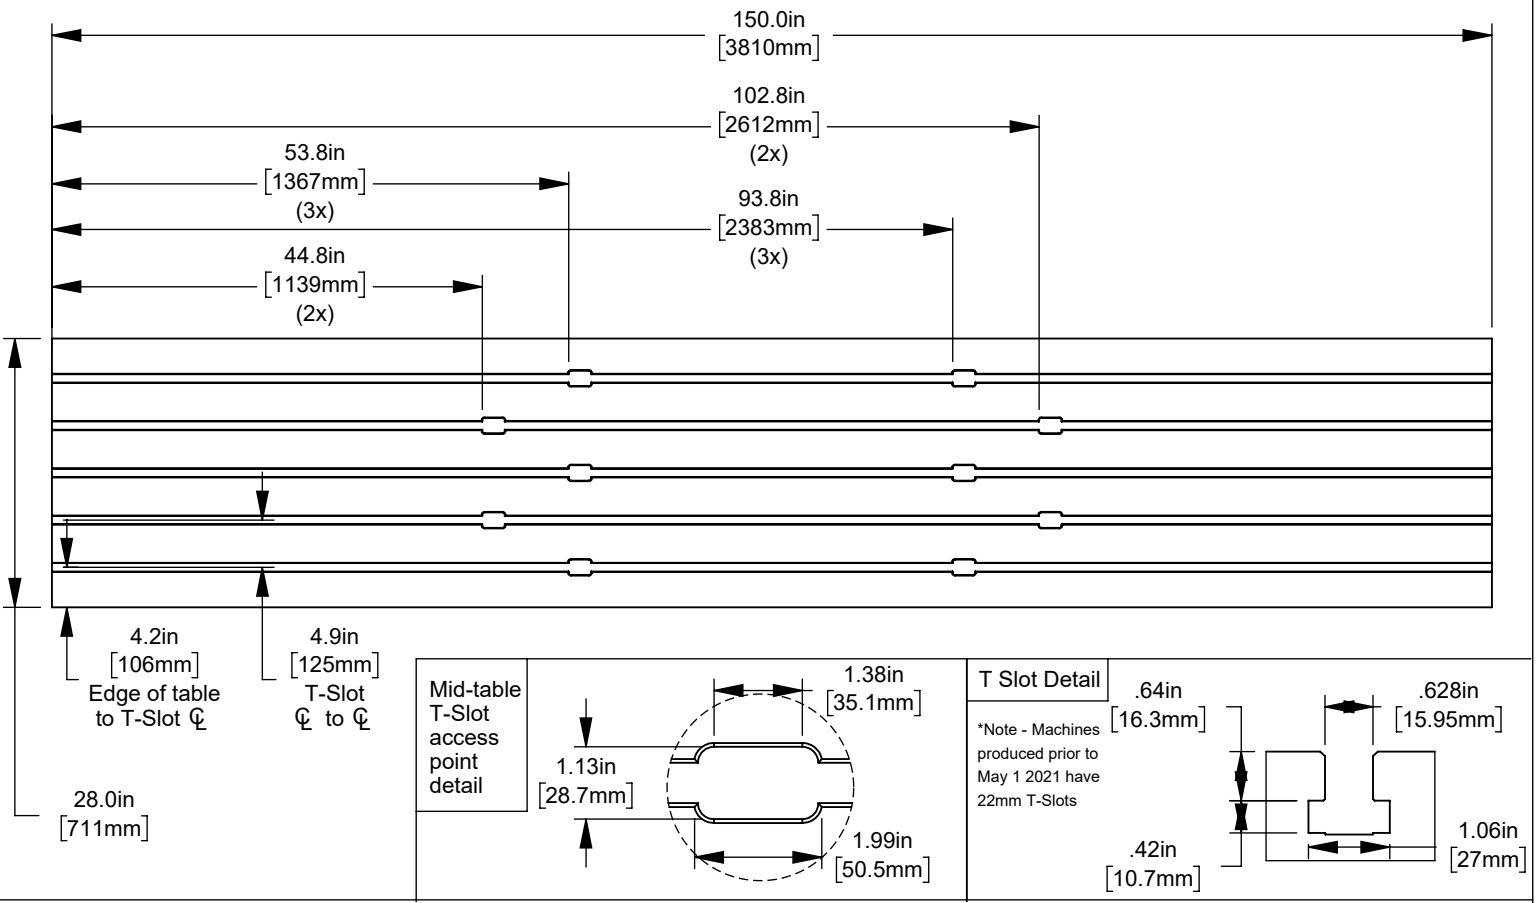

Tool Changer

